



User's Guide

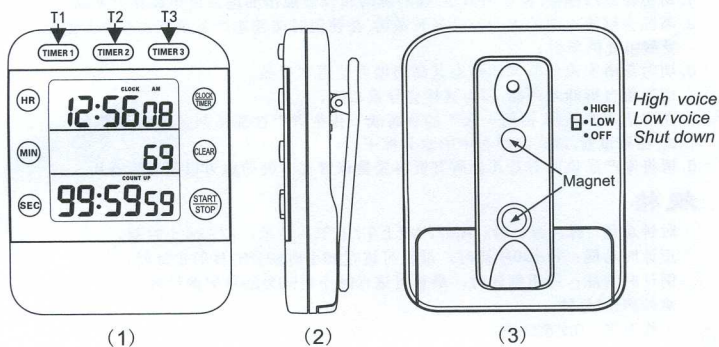

User's Guide

"HR" button: to increase HOURS value
 "MIN" button: to increase Minutes value
 "SEC" button: to increase Seconds value
 Continue pressing above button will increase the value.
 "CLEAR" button: to reset a timer setting
 "CLOCK/TIMER" button: to switch between clock and timer


"T1" button: to start or pause the timer. Recall last setting while in zero status.
 "T2" button: same as "T1"
 "T3" button: same as "T1"
 "START/STOP" button: to Start, Pause or Stop the count up or count down timer. Recall last setting of T1 T2 T3 while they are at zero status.
 Press one of the keys "HR", "Min" and "sec" to switch to 12 / 24-hour system.

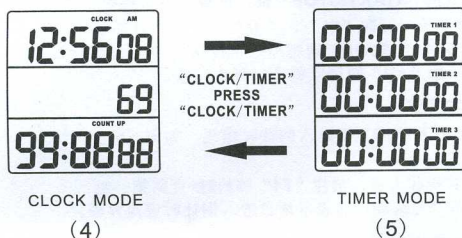

- Press the "HR" button to increase the HOURS value, the "MIN" button to increase the Minutes value and the "SEC" button to increase the Second value. Continue pressing the button to increase the value.
- Press "CLEAR" to reset the value to zero.
- Press the "T1" button to confirm the new setting.
- Repeat the steps above to set T2 and T3.

B Starting a Countdown

- Press the T1 button to start the T1 count down, the T2 button to start the T2 count down and the T3 button to start the T3 countdown.
- Press the T1, T2 or T3 button again to pause the timer. Press it a gain to continue the countdown.
 * A TIMER1 or TIMER2 or TIMER3 message will appear in the Time/CountUp mode while it is counting down.
- Press the "CLEAR" button to reset a timer setting or to reset all 3 timer settings back to zero when the timer is in the pause status.
- Press the "START/STOP" button to recall or bring back the last setting. When the timer is reset to zero, a "MEMORY" message will appear on the screen.
 * Press "T1", "T2" or "T3" to recall or set the T1, T2 or T3 timer back to zero respectively. At the same time, a "MEMORY" message will appear on its corresponding screen.

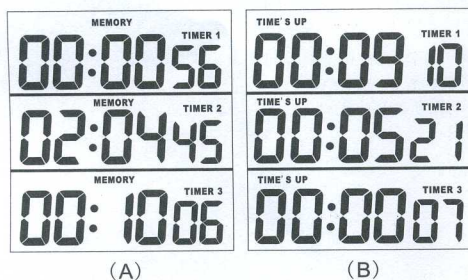

Specifications

- Clock: Displays Hr/Min/Sec (AM/PM), 12 / 24-hour system.
- Count Up Timer: 99 hours, 59 minutes and 59 seconds
- Count Down Timer: 3 sets. 99 hours, 59 minutes and 59 seconds. Will beep for 1 minute once it reaches the set time.
- Requires: 2 x 1.5V lithium batteries (included)
- Large LCD with clear and readable information on the screen
- Flexible design suitable as stand-alone on a desk or a magnet for the refrigerator
- Available space for customized logo imprint
- Material: ABS
- LCD screen size: 4.38 x 3.98 cm Dimensions: 8.82 x 6.62 x 1.32 cm, Weight: 90g

Basic Settings

- * To switch between "Time/Count Up" and "Count Down" mode, press the "CLOCK/TIMER" button.
- 1. Under the Time/Count Up mode, press the "CLOCK/TIMER" button for 2 seconds until the screen starts flashing. This signifies you have entered the time setting menu.
- 2. Press the "HR" button to increase HOURS value, the "MIN" button to increase Minutes value and the "SEC" button to increase Seconds value. Continue pressing the button to increase the value.
- 3. Press the "CLOCK/TIMER" button to confirm the new setting.
- * Press one of the keys "HR", "Min" or "sec" to switch to 12 / 24-hour system.

How to Use the Count Up Timer

- Under Time/CountUp mode, press the "START/STOP" button. The timer will start the count up. Press the "START/STOP" button again to pause and press it again to continue the count up.
- When you pause the count up time and press the "CLEAR" button, it will reset the timer to zero.

How to Use the Count Down Timer

- * Press the "CLOCK/TIMER" button to enter the "Count Down" mode.

A: Countdown Settings

The timer allows 3 sets of countdown time - T1 to T3.
 Their functions are the same. We'll take T1 as an example:

- Press the "T1" button for 2 seconds until the "T1"

C. Stopping a Countdown

- Once it reaches the set time, a "TIME'S UP" message will appear. The screen will flash, continue to count up and will beep for 1 minute.
- When it reaches the set time, press "T1" or "T2" or "T3" or "START/STOP" to stop the beep sound and the timer. Press "CLEAR" to reset it to zero.
- You can set the timer only if the timer's value is zero.

- * The "TIME'S UP" and "TIMER 1" (TIMER 2 or TIMER 3) message will flash on the screen when you are in the "CLOCK /TIMER" mode.

Power Supply

A.Set the countdown time

- * If the long-term non-use of this product, please take out the battery

B:Important

- * Enable children to stay away from the battery, in case a child has been swallowed, immediately to the hospital for treatment.
- * If the battery liquid leakage, Ma Ganjing Block batteries immediately and take care not to let It is your direct contact with skin.
- * Installing the battery, its attention to the positive (+) and negative (-) must be in the right direction.
- * This product is the battery is not charging the battery, do not charge for.
- * Please replace the battery at least once, even if the current use of battery power there Need to be replaced.
- * If the time to stop or darken, said the lack of battery power, this phenomenon was found after the cut
 The battery will not stay on
 Products, please replace the batteries as soon as possible.
- * This product is the original battery power will be stored and transported during the ongoing consumption.

C:Battery replacement

- Lid down by the battery, "▲" position, open the battery cover can be removed.
- Remove the battery products, put on 2 new 1.5V Li-ion battery.
 * Pay attention to the positive (+) and negative (-) must be in the right direction.
 * 2 battery must be completely replaced.
- Hop on the battery cover.